

VIEWRAIL

DriveTite™

Installation Instructions



What's in each Kit:



Other stuff you'll need: (sold separately)



DriveTite Tool Kit



Stainless Steel Cable




Impact Driver




11/16" Forstner Bit

For Level Installations

1. 3 1/8" Max Cable Spacing


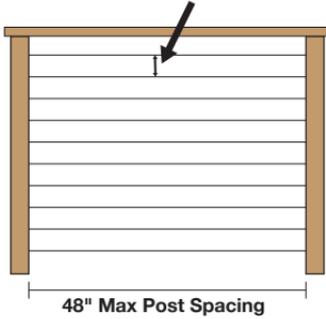


2.

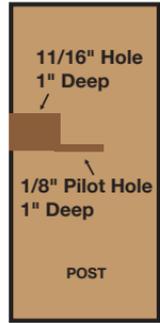


*When installing in hardwoods, drill 11/16" hole to a depth of 1 1/4" and make the pilot hole 3/16".

3. Measure with String

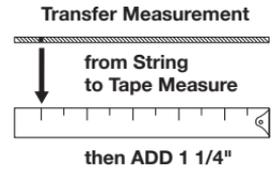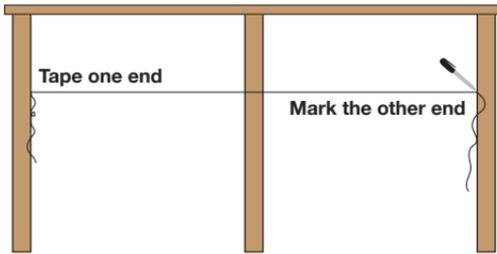


String is included in the DriveTite Installation Kit

4.

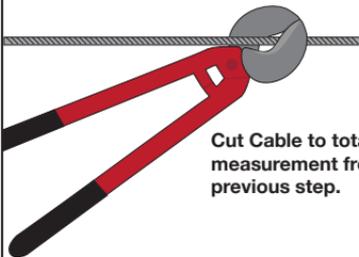


Cut Cable to total measurement from previous step.

5.

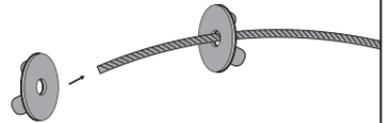


Slide Wood Angle Inserts onto Cable. Make sure prongs face posts that they will enter.

6.

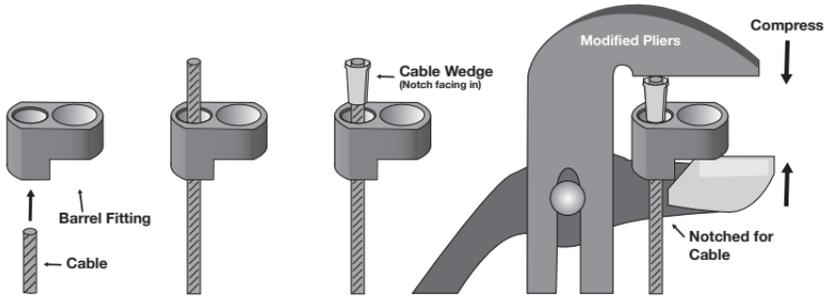


7.

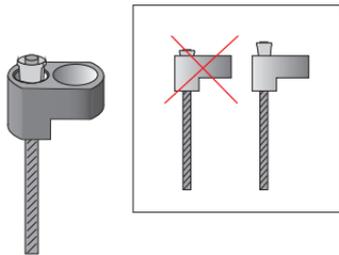

8.

Clear any debris from hole.

Make sure Barrel Fitting is started into hole before driving screw.

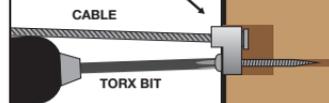


DO NOT TIGHTEN YET!
Get the screw started, but don't tighten.

STOP

Repeat steps 3-8 until all cables are mounted.

Now tighten both ends to tension cables.
Use the Holding Tool to keep Barrel Fitting vertical while tightening.

Tension cables in this order

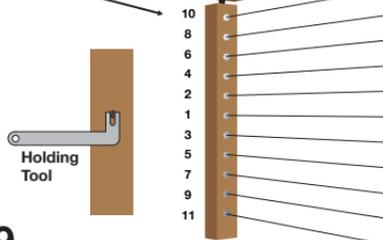


9.

Remove adhesive backing.



Press Wood Angle
Insert into hole with thumbs.

Tap with wood block
until fully seated.

10.

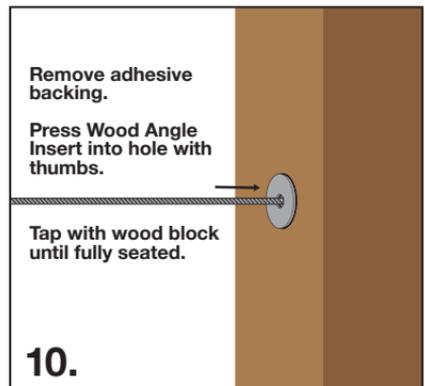

For Angled Installations

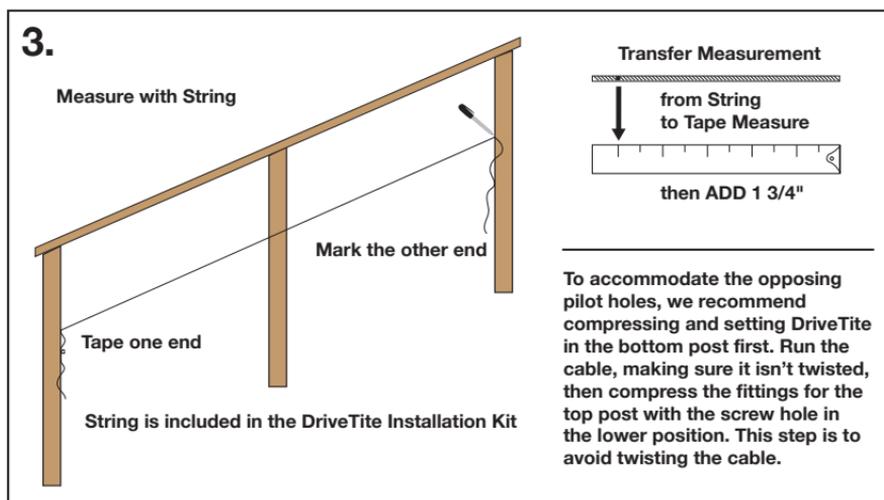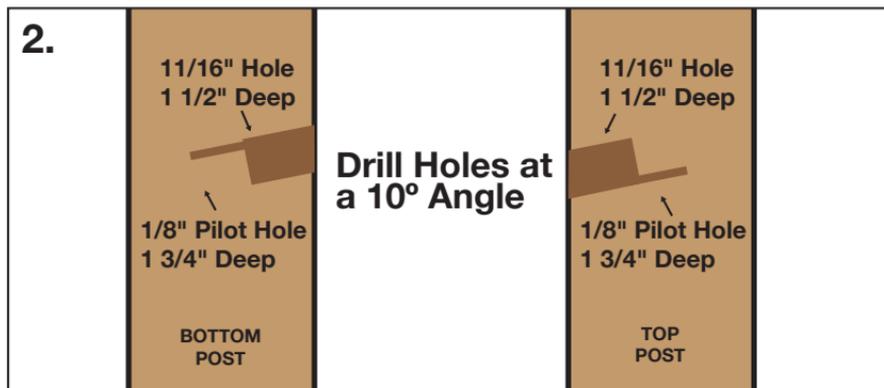

See Steps 4–10 on the previous page.

Thanks for choosing Viewrail for your stainless steel cable railing!
Please visit our YouTube Channel for helpful installation videos.

www.youtube.com/Viewrail