


VIEWRAIL

DriveTite™ SURFACE

Installation Instructions



What's in each Kit:

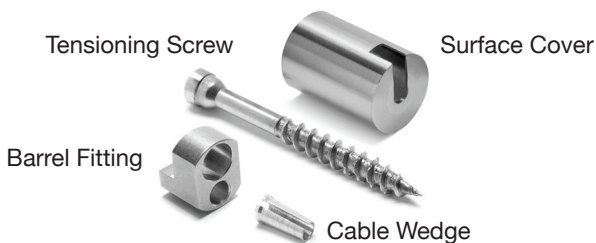

Other stuff you'll need: (sold separately)



DriveTite Installation Kit



Stainless Steel Cable





Impact Driver





1/8" Drill Bit


Instructions for Level and Angle Cable Runs

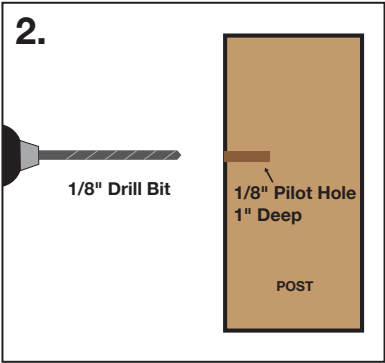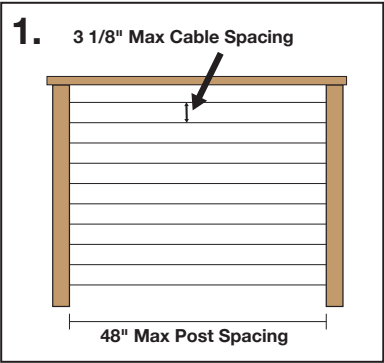


*When installing in hardwoods, make the pilot hole 3/16".

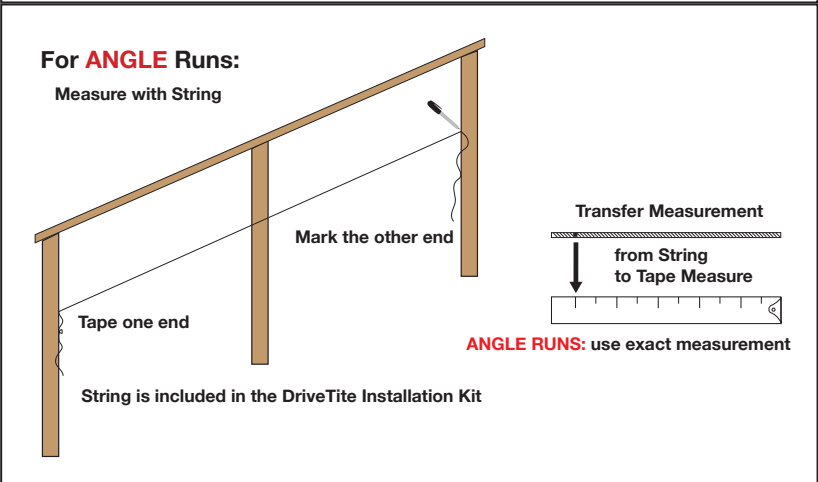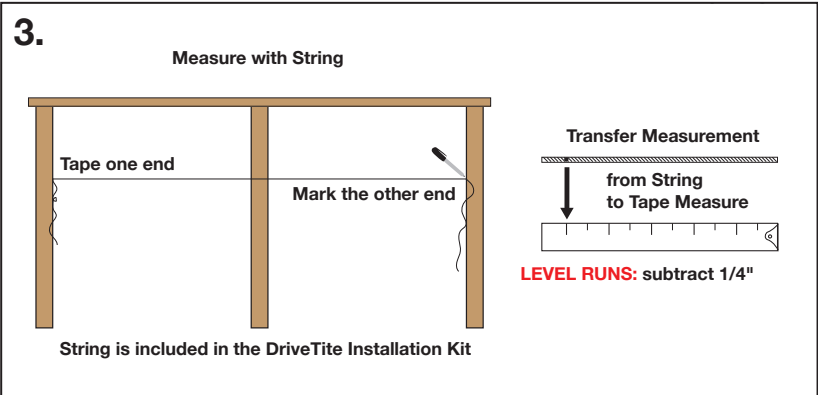


4.

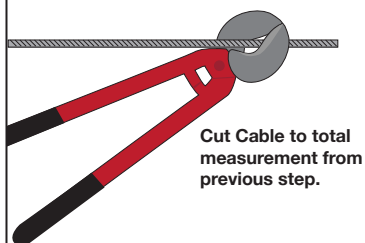


5.




6.

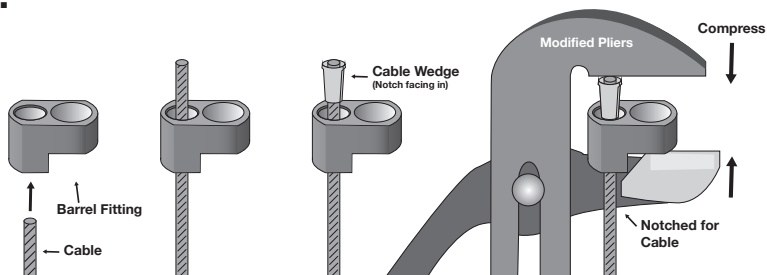

7.


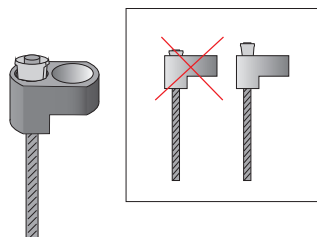


8.

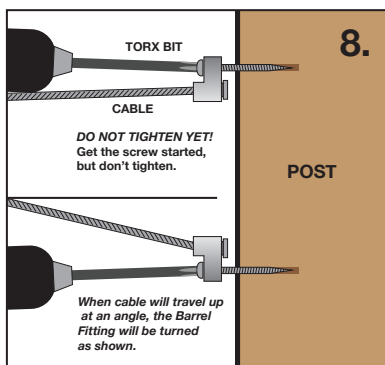

STOP

Repeat steps 3-8 until all cables are mounted.

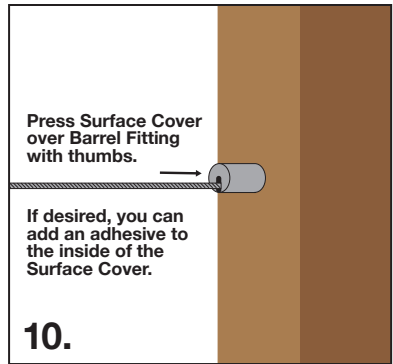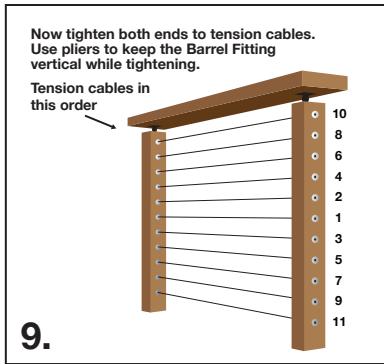

Congratulations on your new Viewrail cable railing system!

Thanks for choosing Viewrail! Please visit our YouTube Channel for helpful installation videos.

www.youtube.com/Viewrail