



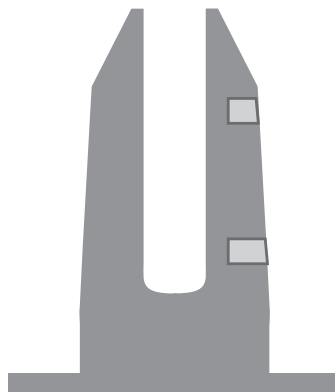

Surface Mount Talon Spigot Installation Instructions

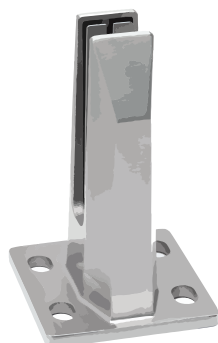

Before You Begin

Inspect area where the Spigots are being installed. Ensure that your mounting surface has sufficient backing. For most jobs, a minimum of 4" of backing material is recommended in order to securely mount your Spigots. All Viewrail Glass systems and fittings are designed to have a 1" gap between panels of glass.

Protect All Finished Surfaces

At each phase of installation, be sure to protect your Spigots and glass panels from debris that can cause marring to their finished surfaces.

Items You'll Need

Viewrail Layout Drawing

Glass Installation Kit:

- (1) Bottle of Gyeon Glass Cleaner
- (1) Microfiber Cloth
- (1) #5 Allen Wrench
- (1) #4 Allen Wrench
- (1) 2" T-30 Drive Bit
- (1) Stainless Steel Wipes
- (1) Pair Glass Suction Cup Handles

Cordless Drill

Impact Driver


Pencil




Youtube Animation

- 1 Refer to your Layout Drawing to determine the mounting location for each of the spigots.


- 2 Snap chalk line to mark where the glass will run. Mark Spigot locations according to your Layout Drawing.

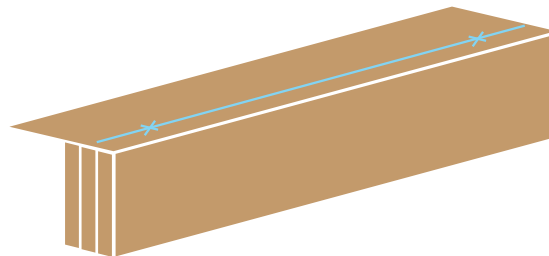


3

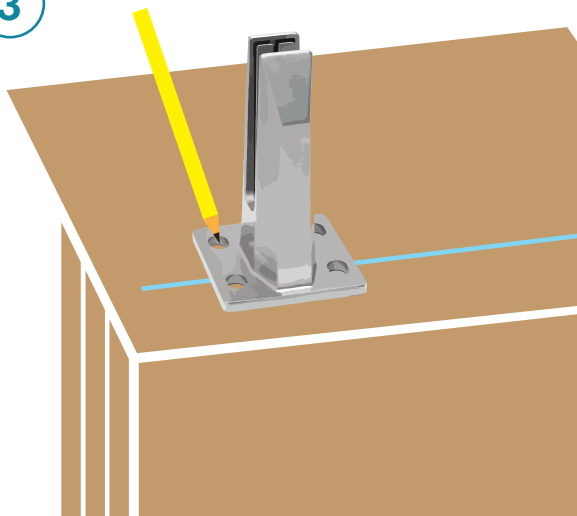


- 4 Predrill with 7/32" bit.

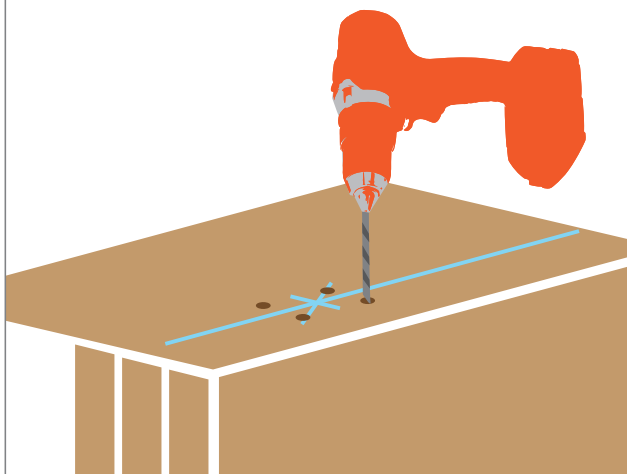


5

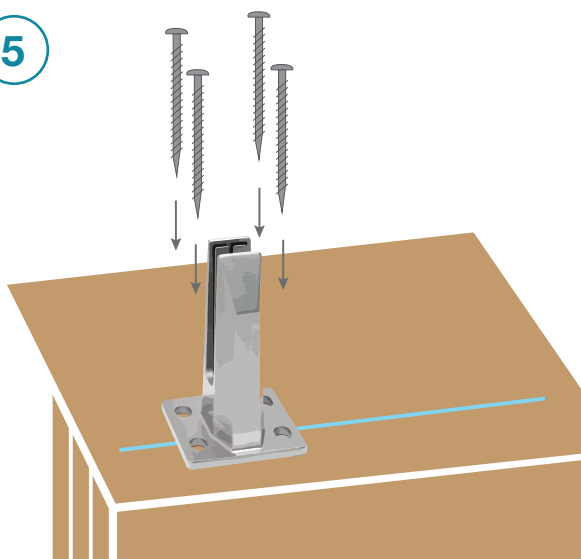


- 6 Slide foot cover on.

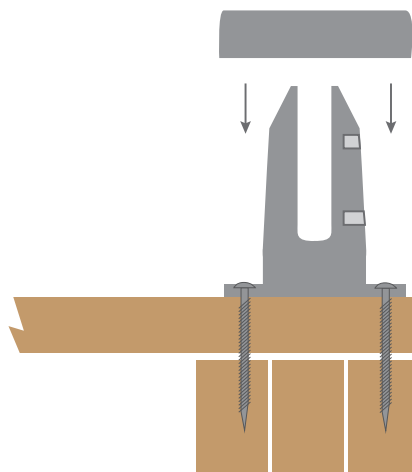

7 Install steel press plate.

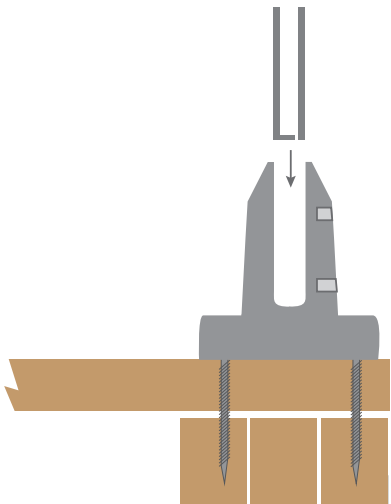


8 Install plastic lining.

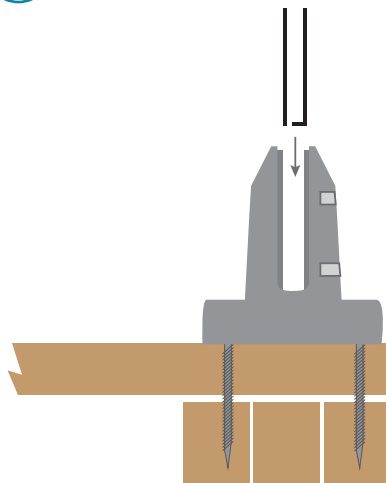


Repeat steps 1–8 until
all Spigots are mounted.


9 Carefully insert glass panel.

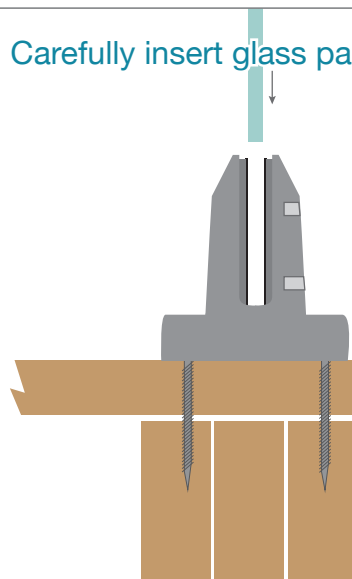

10 Gently secure glass panel with allen screws on the front of the Spigot.

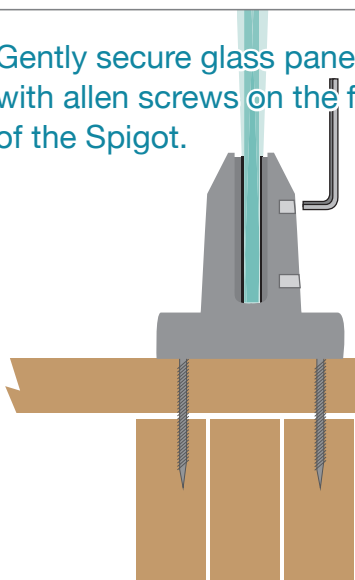

11 Align panels.

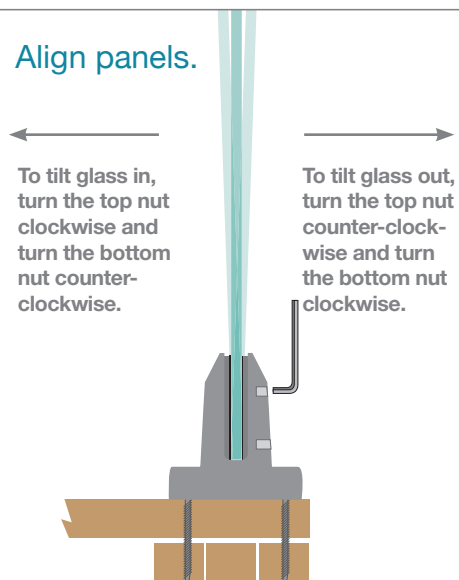



Congratulations! Your Install is Done

We'd love to see your work! Snap a few pics with your phone and send them to [ADD EMAIL ADDRESS HERE]. Thanks for choosing Viewrail. Enjoy your new installation!