



VIEWRAIL

DriveTite™

INTERIOR

Installation Instructions



## What's in each Kit:

Tensioning Screw



Wood Angle Insert



Cable Stop



Barrel Fitting



## Other stuff you'll need: (sold separately)



DriveTite Tool Kit



Stainless Steel Cable




Impact Driver




11/16" Forstner Bit

## For Level Installations

### 1. 3 1/8" Max Cable Spacing


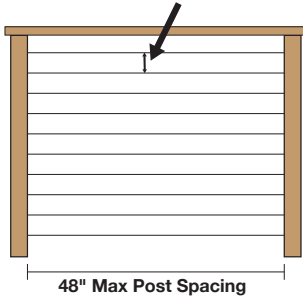


### 2.

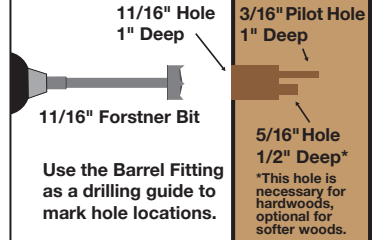


### 3.

#### Measure with String

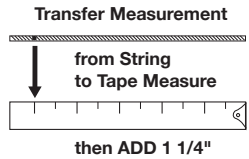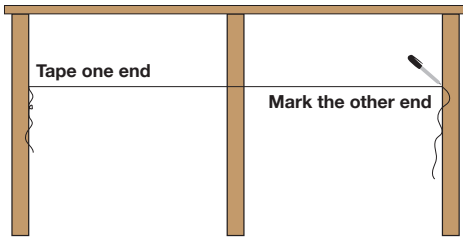


String is included in the DriveTite Installation Kit


### 4.

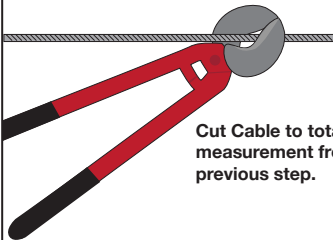

### 5.




6.

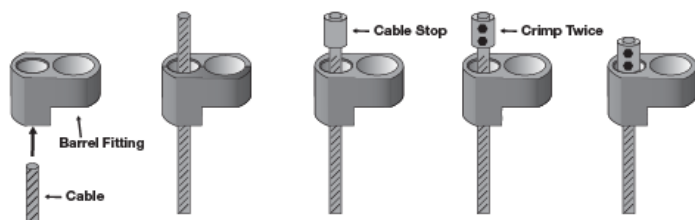

7.

Clear any debris from hole.

Make sure Barrel Fitting is started into hole before driving screw.




**DO NOT TIGHTEN YET!**  
Get the screw started, but don't tighten.



Repeat steps 3-7 until all cables are mounted.

8.

Now tighten both ends to tension cables.  
Tension cables in this order:

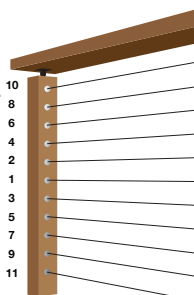


9.



Remove adhesive backing.

Press Wood Angle Insert into hole with thumbs.

Tap with wood block until fully seated.

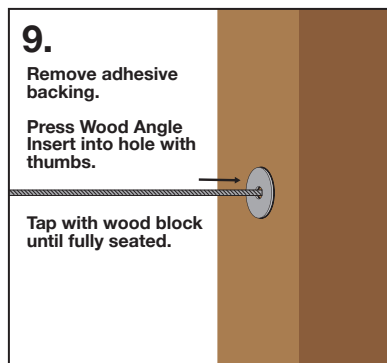

## For Angled Installations

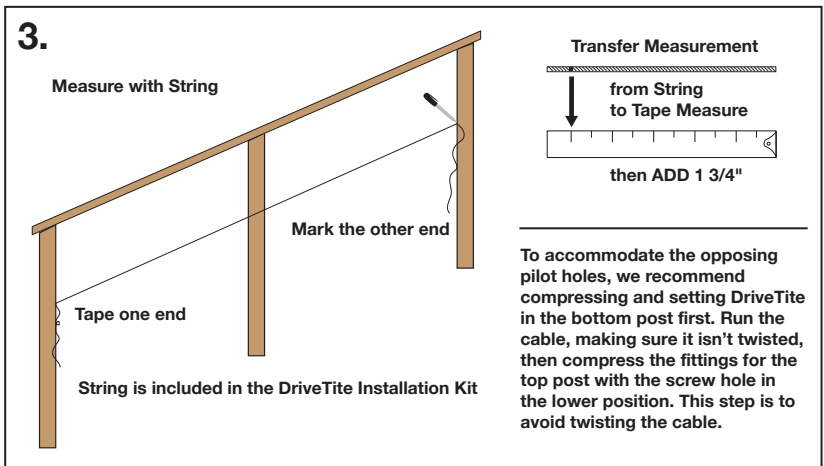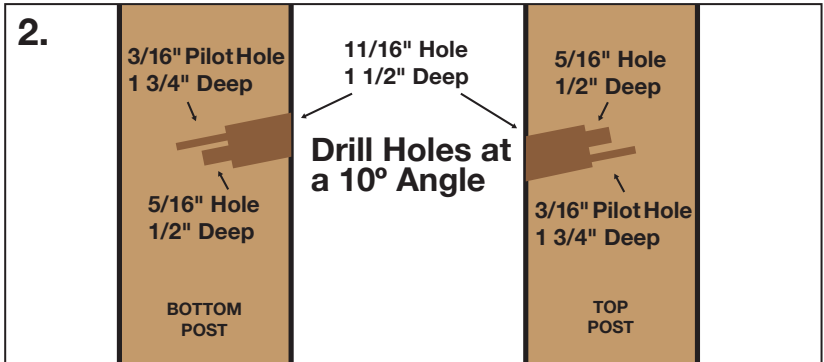

See Steps 4–9 on the previous page.

Thanks for choosing Viewrail for your stainless steel cable railing!  
Please visit our YouTube Channel for helpful installation videos.

[www.youtube.com/Viewrail](http://www.youtube.com/Viewrail)